



NV7 QUICK START


A.u.S. Spielgeräte GmbH , 0043 (0) 1 271 66 00 , www.aus.at

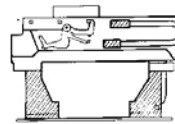


Slide In Cash Box

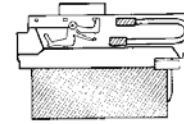


Clip On Cash Box

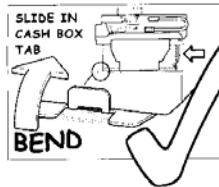


To ensure correct operation of the NV7 stacker, bend up the metal tab behind the sliding cash box.

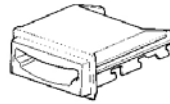


Horizontal Bezel PA189

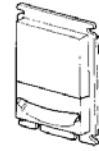


Vertical Up Bezel PA188

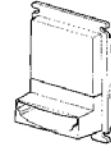


Vertical Up Snout Bezel PA190

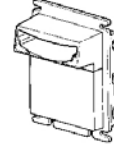


Vertical Down Snout Bezel PA191

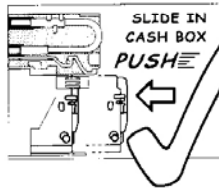


Ensure that the cash box is firmly held into the correct position by the black plastic holding clips.

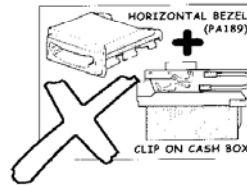


The 300 / 600 clip on cash boxes can be used with the vertical bezel options only.

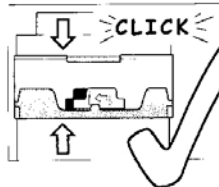


Ensure that the NV7 is held fully closed at the front by the red sliding clip.

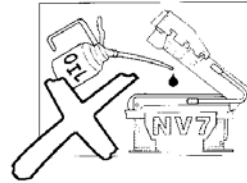


Do not attempt to lubricate any of the mechanisms as this may affect the note transport.

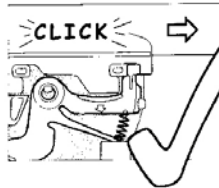

Make sure the bezel locking arms on both sides have located correctly.

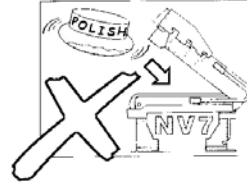


Do not polish the note path / lenses, as this may alter the optical characteristics.

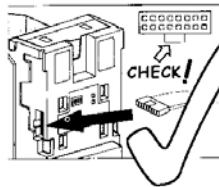


Ensure that interface connector is located correctly.

Electrical supply:
11-16 Volts DC
1.6 Amps

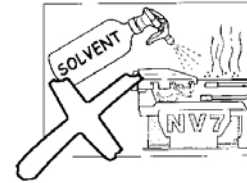

Clean using a lint free cloth and a dilute solution of a household washing up liquid. **NEVER** use a solvent cleaner, alcohol, white spirit or PCB cleaner.

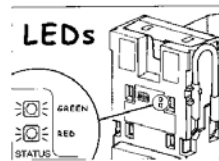

Dip Switch settings:
See label on top of NV7 unit.

Slow flashing GREEN (1 second period)	In normal RUN operation. NV7 is ready to read notes. Flashing GREEN "Heartbeat" LED = Healthy status.
Slow flashing RED (1 second period)	NV7 is jammed, check note path.
Fast flashing RED (Half second period)	NV7 cannot calibrate, sensor(s) may be blocked.
Alternately flashing GREEN then RED	Stacker is full.

<http://www.aus.at>

Issue #:	MOD #:	Date:	MOD by:
1	PROD REL	09/01/03	JEB
2	MOD	31/01/03	JEB

GA314 - Issue 2 - MODs to be done by magnetic media